

braintronics®

Body&Mind syncSystem

CASADA
HEALTHCARE



< timeto**relax**



QUATTROMED V



< timetorelax

Since the company was founded in the year 2000, the name CASADA has stood for high grade products in the area of wellness and fitness.

Today, CASADA – products are available worldwide. What distinguishes CASADA products is their continuous development, unmistakable design and their absolute focus on improving quality of life as well as their reliable and excellent quality.

Congratulations!

With the purchase of this massage device you have shown awareness of your health.

In order for you to enjoy the advantages of your massage device in the long term, we ask you to read and adhere to the instruction manual carefully.

We wish you a lot of fun with your personal Quattromed V.

Table of Contents

Safety Instructions.....	20
Scope of Delivery.....	23
Assembly Startup	24
Troubleshooting	25
Specials.....	26
Remote Control.....	28
Storage Maintenance	32
Specifications	32
Eu Declaration of Conformity.....	32
Warranty Conditions	33

Safety Instructions



Please read the following instructions carefully before putting your massage device into use to ensure trouble-free operation and optimum efficiency. Please retain these operating instructions for further use!

- The massage device conforms to recognised technical principles and the latest safety regulations.
- This device does not require any maintenance.
- Any possible repairs may only be carried out by authorised expert staff.
- Improper use and unauthorised repairs are not permitted for safety reasons and lead to loss of warranty.
- Never touch the power plug with wet hands.
- Please avoid contact of the device with water, high temperatures and direct sunlight.
- To avoid the danger of short-circuits, disconnect the power cord when not used for long periods of time.
- Do not use any damaged cables, plugs or loose sockets.
- If plugs or cords are damaged, they must be replaced by the manufacturer, a service representative or by qualified personnel.
- In case of malfunction, disconnect immediately from the mains.
- Misuse or incorrect use excludes any liability for damage.
- In order to avoid excessively stimulating the muscles and nerves, the recommended massage time of 30 minutes should not be exceeded.
- Each massage – even a hand massage – must be refrained from during pregnancy or if one or more of the following complaints are present in the massage area: recent injuries, thrombotic diseases, all kinds of inflammations and swellings, and cancer. It is recommended to consult a doctor before having a massage for the treatment of ailments and illnesses.
- Do not use this device while driving.
- If you are dependent on electrical aids e.g. pacemakers, please be sure to consult your doctor for medical advice before taking a massage.
- The packaging material supplied should not be used as a toy.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

 
- Children are not allowed to play with the device.
- Cleaning and maintenance should not be done by children without supervision.
- Persons who are sensitive to heat shall be careful when using the unit.
- Use the device only with the supplied equipment.

“BRAINTRONICS” CONTRAINDICATIONS

- Psychoses (e.g. Schizophrenia, bipolar disorder, endogenous depression)
- Personality disorders
- Epilepsy and similar seizure disorders
- Heart conditions
- Diseases of the central nervous system
- Thrombosis
- Endogenous depression
- ADHD (under-active)
- Recent heart attack or stroke
- Mental disability
- Addictions such as to drugs or alcohol or dependency on medication
- Regular intake of psychotropic drugs
- Pregnancy

NOTE: For ethical and legal reasons, braintronics should not be used on children and young people without the explicit permission of the legal representatives. Persons for whom meditation may conflict with religious beliefs should refrain from using the product.



Scope of Delivery

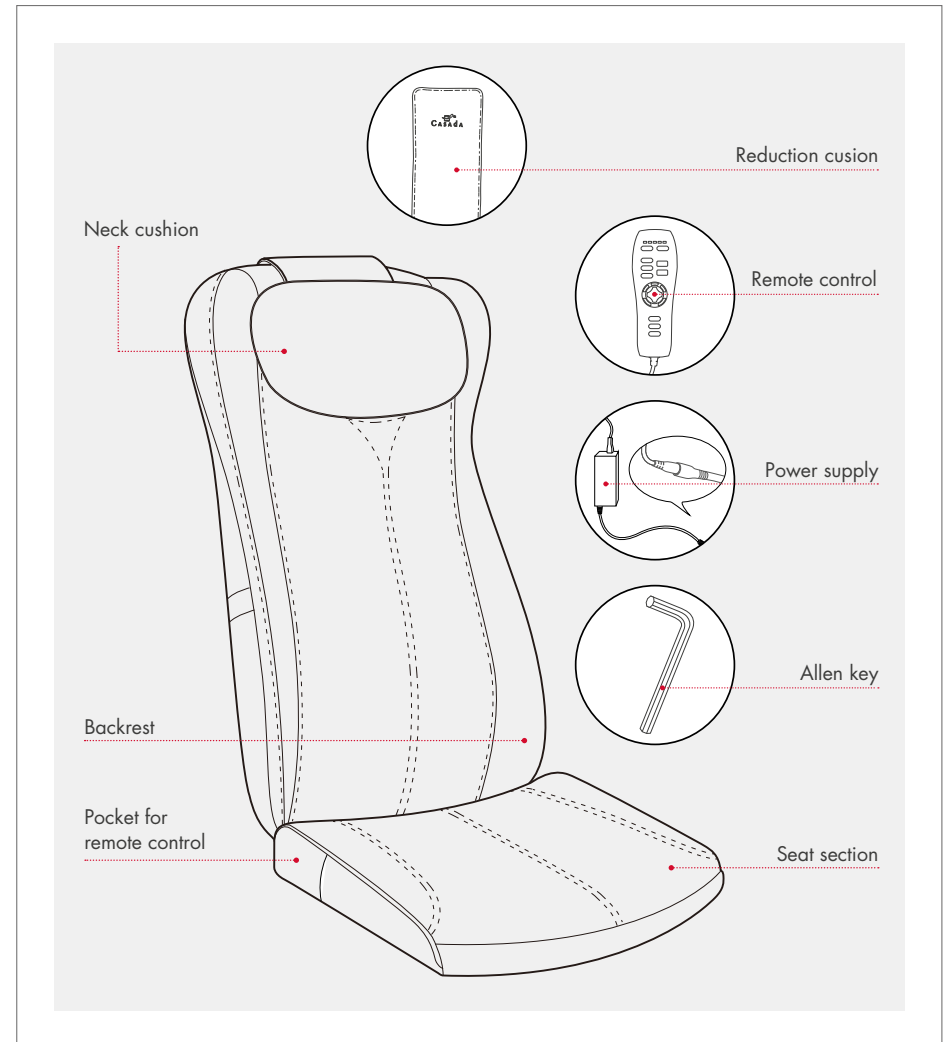


- Power supply unit 24 volts
- Manual
- Neck cushion
- Backrest
- Seat section
- Reduction cushion
- Remote control
- Allen key

Assembly | Startup

  
1. Open the box, remove the power supply unit and place it within reach.
 2. Take the black fabric bag out of the box carefully, open the zip fastener and remove the Quattromed V and the seat cushion packaged in protective film.
 3. Remove the protective film.
 4. **REMOVING LOCKING SCREW:**
Carefully loosen the screw with the attached Allen key on the back of the massage device. A screw is applied on the back of the product to protect the Quattromed apparatus during shipment. Remove the screw before use.
- ATTENTION!** The screw is not to be used again. Just remove it.
5. The overlay/cover can be separated from the backrest using a zip fastener and the neck cushion (Figure 1) can be separated from the backrest in the head area using a hook & loop fastener. Before the first use, remove the protective cardboard between the cover and the device. The padded backrest ensures a more gentle massage. For an intensive massage, remove the backrest.
 6. Back and seat section are not connected to each other at the time of delivery. For parallel use, remove the remote control from the pocket in the seat section and now attach both parts via the zip fastener (Figure 2).
 7. Then plug the cables together as shown (Figure 3).
 8. Position the Quattromed V on a suitable chair or armchair. The massager is equipped with back strap that allow user to faster onto most chairs. Place the massager on a chair, wrap the two end of the strap at the back of the chair then secure with Velcro.
 9. Finally, connect the power supply unit with the connection cable (Figure 4), plug the power plug into the socket and turn the Quattromed V on using the red „ON/OFF“ button.

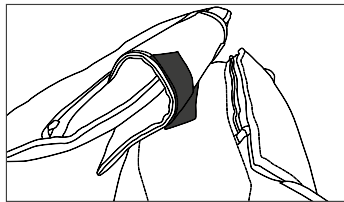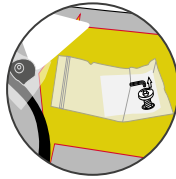


(Figure 1)

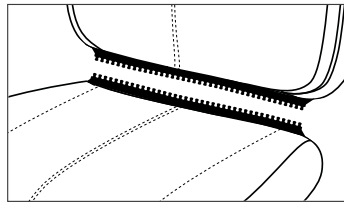 

(Figure 2)

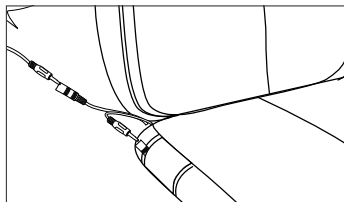 

(Figure 3)

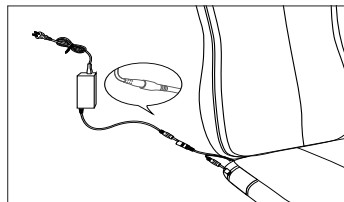 

(Figure 4)

Troubleshooting

 
FAULT

- The device is connected to the mains, however neither the device nor the remote control operation work.
- The device is connected to the mains. The vibration in the seat is running and cannot be switched off. Remote control and massage do not work.
- The device is connected to the mains. Vibration massage does not work.


REMEDIAL ACTION

- Check whether all connections are correctly paired. Ensure that the power supply is fully connected.
- The device can overheat if used permanently. Therefore, turn it off, disconnect it from the mains power supply and let it cool down completely.
- Check whether the connectors are correctly paired for the vibration and power supply unit.


Specials

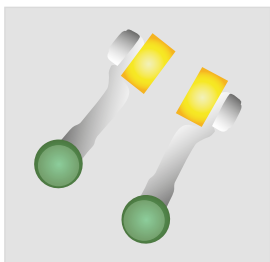

 The Quattromed V massages you with a total of four massage heads using the massage techniques „Shiatsu, Tapping und Rolling“. The back muscles are massaged by moving silicon massage heads plus two other fixed massage heads. Massage heads, refined and enriched with certified jade care for a soothing and deep warmth massage.

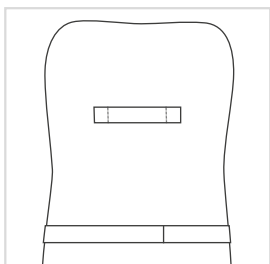

 
The upper strap at the back serves as a support for arranging and positioning your Quattromed V and is not suitable for transportation needs. Please carry your massage device firmly with both of your hands while transporting. The lower Velcro strips serve as a fixation of the Quattromed V at the desired seating and offers a secured stand during the massage.

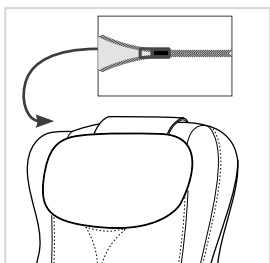

The overlay/cover of your Quattromed V can be removed via the zipper and Velcro fastener on the backrest for cleaning or for a more intense massage.



For a vibration massage on your soles disconnect the seating part via the zipper and place it comfortably beneath your feet.



BRAINTRONICS®

Braintronics® technology synchronises your brainwaves through audio stimulation. Combined with a specially developed massage programme your stress-ridden body will be able to relax.

Specials



ROLLING

Pleasant alternation between relaxation and releasing the muscles – also perfectly suited for a final massage, for relaxation and recovery of the muscles.



SPEED

Massage speed is adjustable.



VIBRATION

The Vibration setting moves parts of the body with equal vibrations, which penetrate deeply into the muscles. This stimulates the circulation in the muscles.



JADE HEATING

Jade is a natural store and conductor of heat. These high-quality jade stones, purposefully integrated in the massage heads dispense deep warmth and a relaxing effect.



AUTOMATIC

Specifically developed automatic programmes for the whole body, which offer a big range of different massage techniques. Additionally you can also turn on the heating function, if you'd like.



SPOT

The massage heads can massage a particular.



SHIATSU

Shiatsu (finger press) is a form of body therapy originating in Japan. The massage technique consists of soft, rhythmic, far-reaching stretches and rotations. The aim of Shiatsu is to simulate individual parts of the body and to mobilise the muscles.



WIDTH

The distance between the both massage heads can be set (narrow, medium and wide).



HEIGHT

Regulating the height limit of the massage technique in two steps.



3D MASSAGE

In this new technique, the massage robot not only moves upwards and downwards, but also forwards and backwards.



BLUETOOTH

Wireless data transmission.

Remote control

- 1. POWER
- 2. AUTO PROGRAMME
- 3. HEIGHT
- 4. HEATING
- 5. VIBRATION
- 6. SHIATSU
- 7. TAPPING
- 8. SLOW | FAST
- 9. SLOW – FAST | FAST – SLOW
- 10. WIDTH
- 11. LO | HI
- 12. UP | DOWN
- 13. FULLBACK
- 14. UPPER
- 15. LOWER



Remote control

1| POWER

Switch the device on/off. When you switch on the device, it will start in the 5 minute demo programme. If no further action will be taken, the device switches off after that time.

2| AUTOMATIC PROGRAMME

The massage device is equipped with 3 automatic programmes. Press [Programme] and choose between CALM (blue LED), REFRESH (green LED) and RECOVERY (red LED). The motor resets after each selection. The massage device only starts the automatic programme afterwards.

CALM:	Just lean back, tune out, rest, relax and recover.
REFRESH:	Fight the signs of fatigue and regain your energy.
RECOVERY:	Penetrating massage techniques. Ideal massage for strengthening and relieving your back.

3| HEIGHT ADJUSTMENT

If you have chosen [Automatic programme] / [FULLBACK] / [UPPER] / [LOWER], press [Height] to activate the height limitation function. To return to the maximum height, press [Height] again.

4| HEATING

The [Heating] function is active at the start of the programmes [Tapping]/[Shiatsu]/[Auto]. To switch the heating function off or on again during the massage, press the button again.

5| VIBRATION

The [Vibration] can be switched on or off at any time during the functions [Tapping]/[Shiatsu]/[Auto]/[Area]. Press the [Vibration] button to start the vibration function. The vibration runs on a 1.5 minute cycle.

6| SHIATSU

Press the [Shiatsu] button to start the Shiatsu function. The standard speed is medium. If the massage device is running in auto mode, the auto mode will thus be stopped. To end, press [Shiatsu] again.

7| TAPPING

Press the [Tapping] button to start the Shiatsu function. The standard intensity is medium. If the massage device is running in auto mode, the auto mode will thus be stopped. To end, press [Tapping] again.

8| SLOW | FAST

The tapping speed can be set to three levels: fast-medium-slow. The functions [Slow] and [Fast] only run when [Tapping] is selected. Press the [Slow] button to reduce the tapping speed and the [Fast] button to increase it.

Remote control

9| SLOW – FAST | FAST – SLOW

The functions [Slow – Fast] and [Fast – Slow] only work when [Tapping] is selected. Press one of the two buttons and the intensity changes automatically for the duration of the massage, from slow to fast or from fast to slow.

10| WIDTH

The [Width] function only works when [Tapping] is selected. [Width] is not possible in the [Shiatsu] function. Each time the [Width] button is pressed, the width of the massage rollers adjusts in 3 steps, from narrow to wide. When the [Width] button is pressed for a 4th time, this activates an automatic run-through of all the width settings.

11| LO | HI

The Shiatsu intensity can be set to three levels: fast-medium-slow. The functions [LO Shiatsu Speed] and [HI Shiatsu Speed] only run when [Shiatsu] is selected. Press the [LO Shiatsu Speed] button to reduce the Shiatsu intensity and the [HI Shiatsu Speed] button to increase it.

12| UP | DOWN

Control keys for the massage rollers for exact positioning on your back. During the localised massage you can alter the massage area upwards or downwards by holding down these buttons.

13| FULLBACK

Basic programme for the entire back. The programme massages the individual sections of the back using the “rolling” massage technique. The functions [Tapping]/[Shiatsu]/[Heating]/[Vibration] can be turned on optionally.

14| UPPER

Basic programme for the upper back. The programme massages the individual sections of the back using the “rolling” massage technique. The functions [Tapping]/[Shiatsu]/[Heating]/[Vibration] can be turned on optionally.

15| LOWER

Basic programme for the lower back. The programme massages the lower sections of the back using the “rolling” massage technique. The functions [Tapping]/[Shiatsu]/[Heating]/[Vibration] can be turned on optionally.

Storage | Maintenance


With regular maintenance you can increase the service life of the Quattromed V and ensure safe operation at all times.

1. Recommended storage: Dry, free of dust.
2. Keep liquids or open flames away from the Quattromed V.
3. Clean the device with an imitation leather care and with a dry soft cloth.
4. Please do not dip your Quattromed V into water or other liquids during cleaning.
5. Let the Quattromed V dry out completely after cleaning.
6. Ensure that no moisture penetrates the device via the buttons in the remote control.
7. Disconnect the Quattromed V from the main power supply when it is not in use.

Specifications

Backrest dimensions:	75 x 45 x 20 cm
Seat part dimensions:	7,5 x 45 x 42 cm
Weight:	10 kg
AC adaptor voltage:	
Input:	100-240V~, 50/60 Hz
Output:	24V ⁼⁼⁼ , 2500mA
Product voltage:	24V ⁼⁼⁼
Nominal power:	
In operation:	60 W
Automatic runtime:	15 minutes

 Certificates:



Eu Declaration of Conformity

Compliant with European regulatory standards EMC 2014/30/EU and LVD 2014/35/EU.

Warranty Conditions

The retailer guarantees a statutory period of warranty for the product described on the reverse. Warranty is valid from the date of purchase. The purchase date must be documented with proof of purchase. The retailer will repair or replace free-of-charge all items covered in Germany for which faults have been discovered. A prerequisite is that you send the faulty device with proof of purchase before the guarantee or warranty period expires. The warranty claim shall not be applicable if a fault is established which has arisen e.g. due to external influences or as a consequence of a repair or modification which was not carried out by the manufacturer or an authorised dealer.

The following points are not part of the warranty:

- Wear parts, e.g. abrasives, working synthetical parts, fabric covers, overlay / cover
- Engine sounds up to 72 db to 30 cm
- Wear caused by improper use
- Commercial use e.g. exhibition use, repeated use without intermediate breaks of 40 minutes
- Exposing the device to heat, humidity of liquids
- Damage due to sharp and/or sharp-edged objects
- Wanton destruction, misappropriation, overloading or accidental damage
- Damage and soiling by domestic animals
- Contamination caused by body or hair care products
- Damage caused by use of acids, solvent or alcohol agents

The warranty granted by the retailer is limited to repair and exchange of the product. Under this warranty, the manufacturer or the retailer shall have no further liability and are not responsible for damages which have arisen due to disregard of the operating instructions and/or improper use of the product.

Where upon examination of the product by the manufacturer it is found that the warranty request does not concern a defect covered by the warranty or that the warranty period has expired, the customer must bear the costs for the inspection and repair.

As manufacturer, Casada ensures the delivery of faultless goods to buyers/partners. Proven production faults are entitled to an exchange after registration and confirmation.

Legal note: All contents do not contain healing statements. The diagnosis and treatment of illnesses and other physical disorders require a treatment by a physician, non-medical practitioner or therapist. The statements are strictly informative and may not be used as a substitute for a professional medical treatment. Every user is beholden to ascertain by accurate examination and, if required, after consultation of a specialist, if the application is the right one for their specific cases. Each dose or application takes place at the risk of the user. We dissociate ourselves from any healing statements or promises.

Casada International GmbH
Obermeiers Feld 3
33104 Paderborn, Germany
info@casada.com
www.casada.com

Copyright pictures and text are subject to the copyright of CASADA International GmbH and may not be used without explicit confirmation.

Copyright © 2020 CASADA International GmbH.
All rights reserved.

